

VGA KVM Switch (8 Port/ 16 Port) User Manual




Print date: 2020/ 04
Version: V1.0

The VGA KVM Switch integrates multiple-port VGA KVM switches in a 1U height console. Multiple computers can be controlled from the single monitor-keyboard-mouse console.

Installation Instruction

1. Make sure the KVM switch has been connected to the ground.
2. Connect one port of KVM signal cable to the computer (make sure the keyboard, mouse and VGA cables are correctly connected), connect the other port to the KVM port.
3. Connect local control keyboard, mouse and monitor to the KVM switch.
4. Connect power cable to KVM port

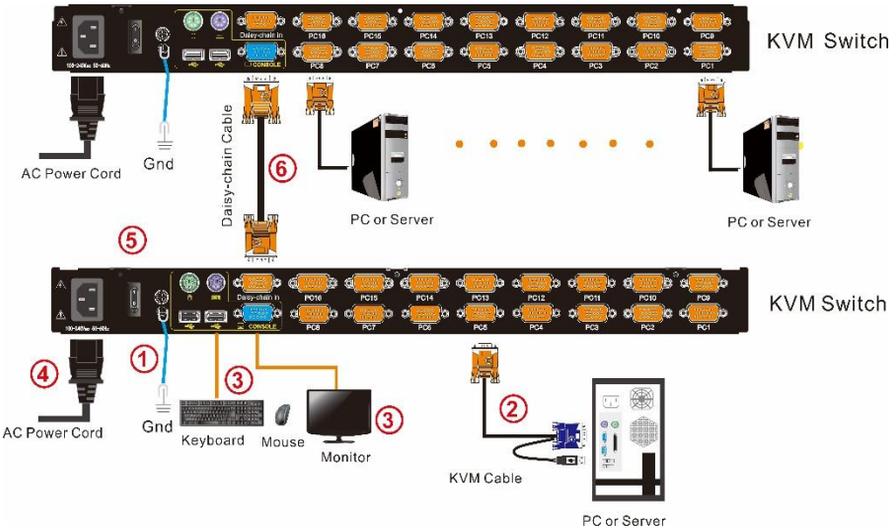

1.1 Install KVM components


5. Cascade installation (optional)

- 1) Plug the yellow port of daisy chaining cable in the yellow “Daisy-Chain in” DB 15 port on the KVM.
- 2) Plug the other blue port in the blue “Console” DB 15 port on the KVM.
- 3) Repeat above steps according to above diagram, it can maximum cascade up to 32 KVM switches.

To ensure signal integrity and simplify cable layout, we strongly recommend you using high quality cables with different length as shown in above table.


Opening the KVM

The KVM makes two “beep” sounds and the LED flashes two times after power on. Then below window appears for you to input user name and password.

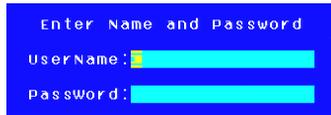

The default password is “blank”, double click to **【Enter】** the OSD main menu to operate the KVM.

LED Instructions

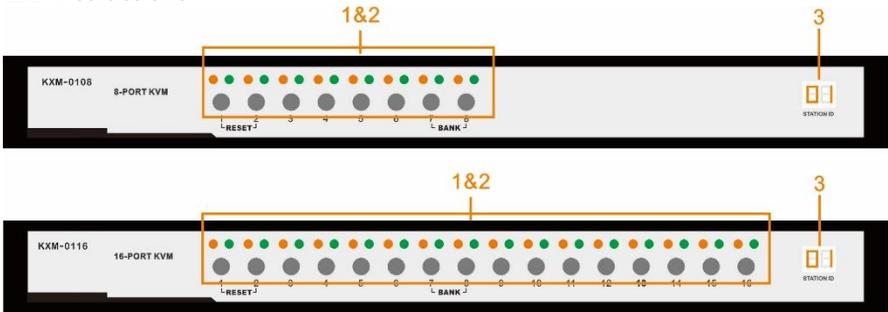


2-1 KVM front view

No.	Components	Function
1	1-8 1-16	1) Switching freely from port 1 to port 8 /16 2) Press 【1】 and 【2】 at the same time resets the KVM. 3) Press 【7】 and 【8】 at the same time switches to next stage level.
2	Port Selection Buttons& LEDs	1) An online LED light(orange) indicates that the KVM has connected to its corresponding computer and power on. 2) A selected LED light(green) indicates that the computer attached to its corresponding port is up and running.
3	Station ID	Station ID shows the current stage level of the daisy chain.

OSD Operation

Double click the right button of the mouse or double click hotkey **【Scroll Lock】** to invoke below OSD main menu. You can customize the OSD hotkeys; find more details in OSD function instructions.

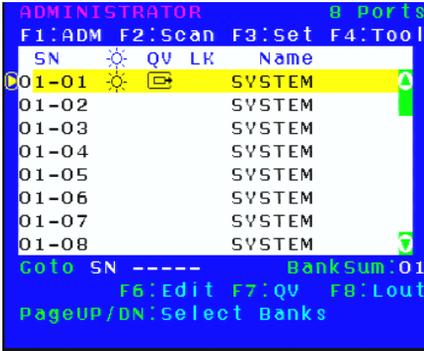


Heading	Explanation
SN.	Port numbers
	On line
	System on
	Quick view
	BRC Port
	Channel is only be seen
Name	Port name

To access the OSD menu through keyboard:

1. In the submenus that appear, moving the highlight bar to your selected port and then press Enter.
2. Press **【Page Up】** or **【Page Down】** quickly moves to next BANK
3. Press any key from **【0-9】** to enter any port of current station, type BANK+PORT to enter other stations.

To access the OSD menu through mouse:

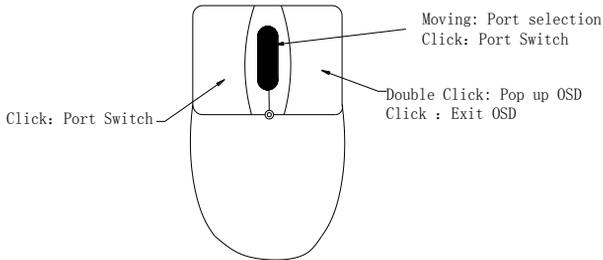

1. Use the scroll wheel to switch from one port to another.
2. Click the right or middle button to confirm your selected port and close the OSD main menu at the same time.
3. Click the right button to exit the OSD main menu.

*Note: Operate via keyboard after invoke the OSD menu via the touchpad.


OSD Functions

Menu	Keys	Submenu/Explanation
ADM	F1	Set User login-Set User login account and password Set accessible-Set access permissions BRC Mode -monitor multiple computers at the same time Load Default-reset the menu to the original factory default settings
Scan	F2	All-Lists all the ports on the installation Power On-lists only powered on ports that have attached computers. Quick View-Lists only the ports that have been selected as Quick View ports
Set	F3	Auto Scan-set scanning time period Port ID-set how long a port displays on the monitor OSD Hotkey-set OSD hotkeys Lout Time off- to set the time out value
Tool	F4	Reset RGB-Press Enter reset RGB Beeper 【On】 -press Enter switch Bee sounds Mouse Hot 【On】 -press Enter to close touchpad operating on OSD. Restore Values-press Enter restore the current user default value. About KVM- press Enter shows the KVM version
Edit	F6	Edits port names
QV	F7	Start or close Quick View
Lout	F8	Log out/lock the KVM
Exit	Esc	Press this key exits OSD menu
	Scroll Lock	Press this key exits OSD menu
	Num Lock	Press this key exits OSD menu

OSD Hotkey Operation

Operating instruction

1. Press **【F3】** and move the highlight bar with **【↓】** to select “OSD Hotkey” submenu . Press **【Enter】** and below screen appears:
2. KVM default hotkey: **【Scroll Lock】**

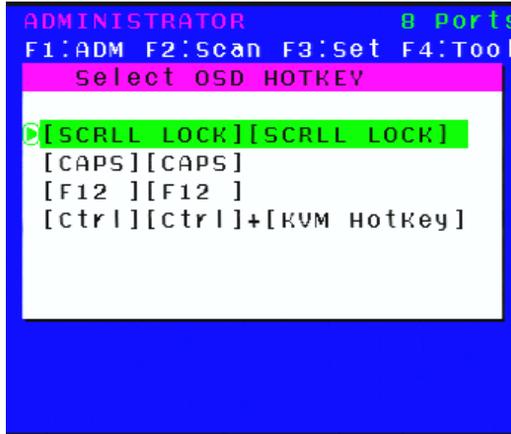

3. Select the “ **【Ctrl】【Ctrl】 + 【KVM Hotkey】** ” and press **【Enter】** , and then the **【Ctrl】** hotkey is available in this hotkey mode, the mouse hotkey can't enter the OSD menu.

Invoke hotkey: double click **【L_Ctrl】** + the corresponding function key

Function	Operating	Function description
Switching port	+ 1~8	Skip ports from 1~8 E.g.: Double click 【L_Ctrl】 plus 2 to skip to the second port of the current station.
	+ F1~ F8	Skip ports from 9-16
	+ ↑/↓	Skip to previous/next port
Auto scanning	+ S	1. Auto Scan automatically scans ports that attached PC or server. Users can set the scan duration in OSD menu and press any key to exit scanning mode. 2. Move the mouse to extend scan interval.
Invoke OSD main menu	+ “space key”	This allows you to invoke OSD main menu (see OSD menu operation)

Specifications

Model		KXM-0108	KXM-0116
Computer Connections		Direct	8
		Max	256
Port Selection		Pushbuttons, hotkeys, OSD menu	
Connector	Console	monitor keyboard mouse	1*HDB-15 Female(blue) 1 * 6P Mini-DIN F(purple) 1* 6P Mini-DIN F(green) 2* USB Type A
	KVM port (HDB-15 Female)		8*(yellow) 16*(yellow)
	Cascade port		1*HDB-15 Female(yellow)
Switch	Port selection		8* keys 16 * keys
LED indicator	Online (green)		8* (green) 16* (green)
	Selected (orange)		8* (orange) 16 * (orange)
	Cascading display		2*7- Segment (orange)
I/R value		100V-240Vac, 50~60Hz, <1.5A	
Video signal		2048×1536;DDC2B	
Power consumption		4W	6W
Emulation	keyboard/mouse		PS/2 ,USB
Environment requirements	Operating temperature		0-40°C
	Store temperature		-20-60°C
	Humidity		0-80%RH,Non-condensing
Physical features	Material		metal
	Weight		2.1kg 2.2kg
	Dimension		440*169*43mm

FAQ

1. The KVM console doesn't work when I connect and use the console for the first time.

Solutions:

- 1) Power off the KVM and disconnect the monitor, keyboard and mouse.
- 2) Disconnect all the signal cables connected to the KVM.
- 3) Disconnect all the signal cables connected to the PC, especially those cables with USB or PS/2 port.
- 4) Make sure the monitor, keyboard and mouse are correctly connected to the KVM console and work properly.
- 5) Then power on KVM and you hear the boot indicating sound from the beeper, a screen automatically pop up for you to enter the user name and password.
- 6) Type in the correct user name and password, then the OSD main menu pop up on the screen.
- 7) Check the KVM console and make sure it can normally switch ports.
- 8) Connect one server (PC) to one of the KVM ports with signal cable and check port switching function, check the keyboard and mouse, if they are not working, try to re-start the server (PC).
- 9) After successfully finishing all above steps, gradually add server (PC) to this console until meet your need.